
### Blind controller zc-blind

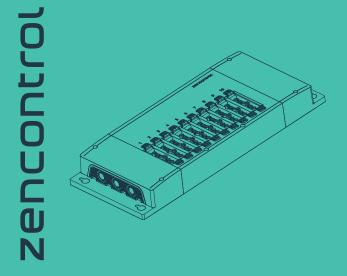

### Product range

Order code	Description
zc-blind	Full feature blind controller

## **Specifications**

Supply voltage	230 V ~ 50 Hz
DALI supply current	235 mA
Output rating	Maximum 250 mA Guaranteed supply 235 mA
Terminal capacity	Mains 1 - 4 mm <sup>2</sup> Digital I/0 0.5 - 2.5 mm <sup>2</sup>
Lighting circuits	3
Load per circuit	10 A
Motor channels	4
Load per channel	375 W / <sup>1</sup> / <sub>2</sub> HP 1.6 A inductive load
Operating temperatur	<b>e</b> 0 to 45°C
Material	PC
Classification	Class I

# Safety information

- This product must only be installed by a licensed electrician.
- Before commencing installation or servicing turn off and isolate all supply circuits.
- Risk of accidental contact with live parts. Do not energise with product open or disassembled.
- There are no user serviceable parts, attempting to service any part of the product will void the warranty
- DALI is not SELV and as such should be treated as LV.
- As the installer, it is your responsibility to ensure you comply to all relevant building and safety codes. Refer to application standards for the relevant rules.
- When the installation is complete, leave this manual with the building's owner for future reference.
- Each circuit must be protected by a MCB rated at 16 A or less


### **Dimensions**


Mounting options Independently mounted control for surface mounting

Mounting centres 470 / 150 mm

**Dimensions** 197 / 500 / 57 mm



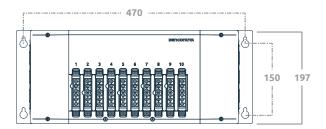

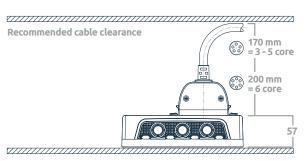


#### **Installation**


Remove the product from the box and inspect it for any damage. If you believe the product to be damaged or otherwise unsound, *do not* install the product. Please pack it back into its box and return it to the place of purchase for replacement.

#### If the product is satisfactory, proceed with the installation:

- 1 Ensure safety warnings are adhered to.
- 2 Mount the unit as shown in *fig 1* or *fig 2* using the appropriate fasteners (not included).
- **3** Wire terminal I/O and secure using provided cable clamps or M20 cable glands as per the wiring diagram in *fig* **3**.
- **4** Connect starter leads to output channels per wiring diagram in *fig 4-6*.

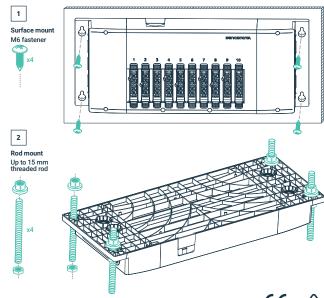

0553116\_V 1.0

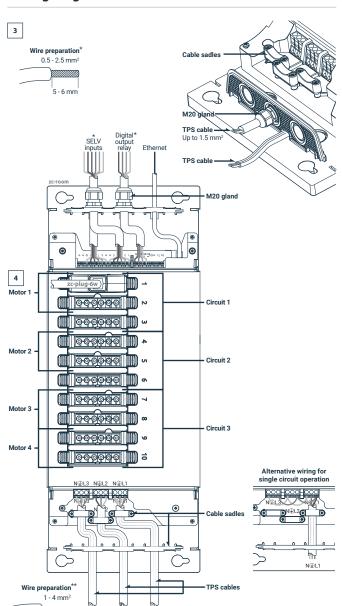

## **Notice**





For more information on compliant software see our website

Circuit 1\*\* Circuit 2\*\* Circuit 3\*\*
phase 1 phase 2 phase 3


zencontrol.com


# Plug wiring

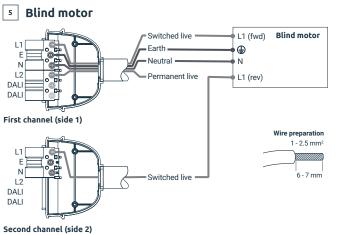

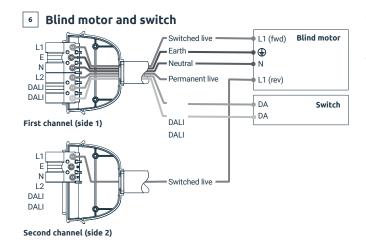

## Configuration

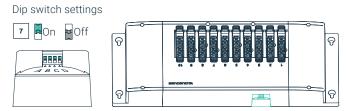

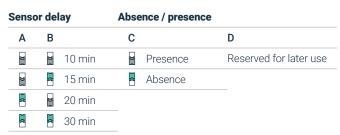

zencontrol.com Sezencontrol